

ACUBLOT INSTRUCTIONS FOR USE

Emergency and Field Service Mat Set

Step 1:

Check that bag is tied with material strips, not a cable tie. Untie material strips and open outer bag. Remove clear plastic bag from inner cartridge. Unfold to use.




Fill small bags attached to sides of the mat with stones/bricks as safety measure in case of strong wind.

NB: Remove stones/bricks *before* placing used mat in clean-up bin.



Step 2:

Place centre of mat under oil spill.

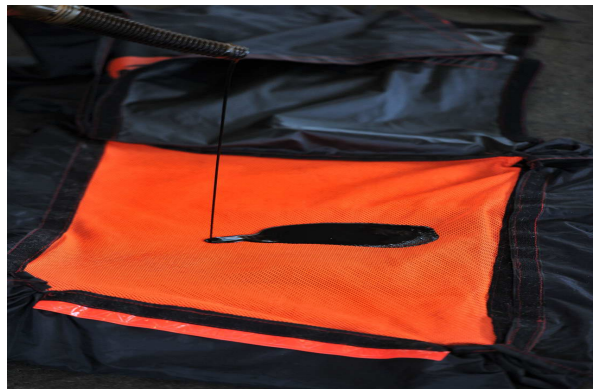

Step 3:

After use, remove stones/bricks from small bags. Bring left side to centre and then right side to centre to form long rectangle.



Step 4:



Fold rectangle lengthwise in half. Roll up.

Place contaminated mat in Acublot clean-up container.



Step 5:

When clean-up containers are full of used mats, contact licensed facility at tel nr 011 824 7580 or www.oilseparationsolutions.co.za for collection or recycling.

Light delivery Vehicle (LDV) Mat



Step 1:

Unroll mat. Place black outer bag on vehicle body, with cartridge facing up. Machinery may be placed directly onto mat.

Step 2:

When mat is saturated with oil, fold two sides with cut out wheelbases to the inside. Then roll up the outer and inner bags up together.

Step 3:

Place used LDV mat in clean-up container on site for collection by clean-up company.

WARNING

- ***Keep Acublot products out of reach of children***
- ***Flammable: Keep away from heat/open flames***
- ***Allergens: Products contain human/animal hair/wool***
- ***Acublot products should be stored in a DRY place.***